





**PrintSign**  
Size 8-1/2 x 11Inches


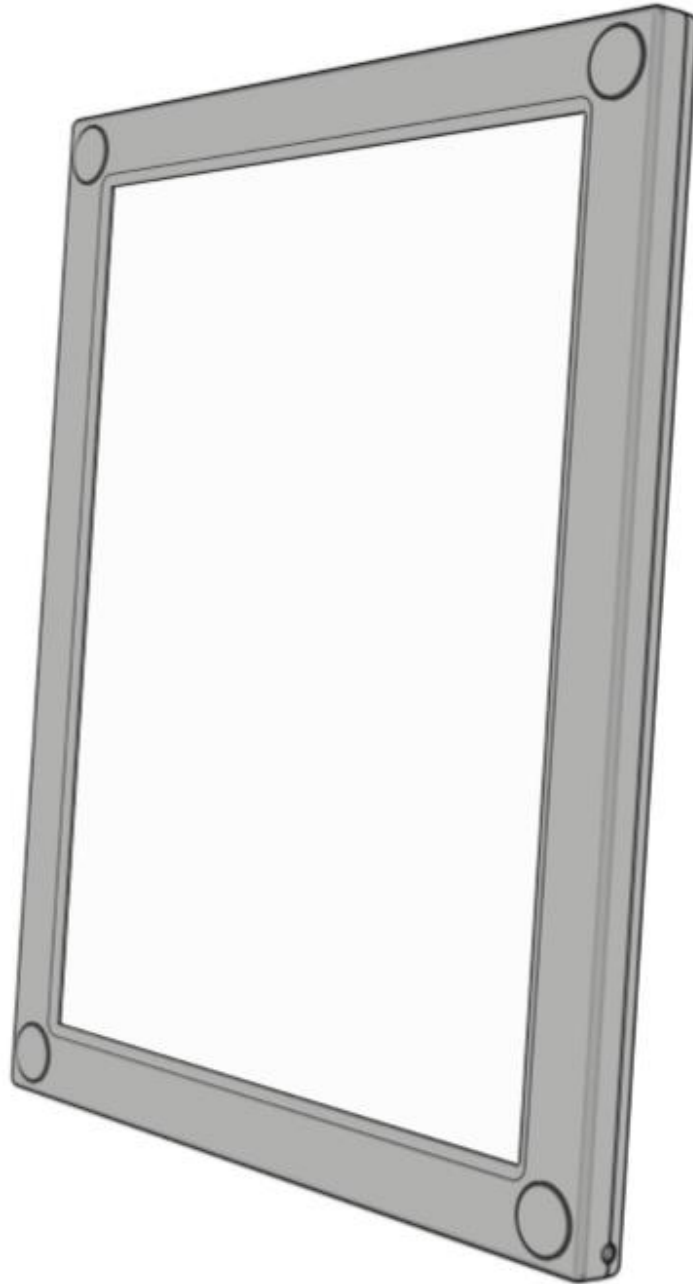



**Reference Guide**

<b>PACKAGE CONTENTS</b>			
<b>ITEM</b>	<b>PART NAME</b>	<b>PART NUMBER</b>	<b>QUANTITY</b>
1	PRINT SIGN ASSEMBLY	ASM-064-01-002	1
2	POWER SUPPLY	PRT-064-01-20	1
3	RIGHT ANGLE ADAPTOR	PRT-064-01-018	1
4	ON/OFF DIMMER SWITCH	PRT-064-01-019	1
5	ADHESIVE HOOK DISK	PRT-064-01-002	8
6	CYLINDER STAND	PRT-064-01-003	2
7	SUPPORT - BRACKET	PRT-064-01-033	1

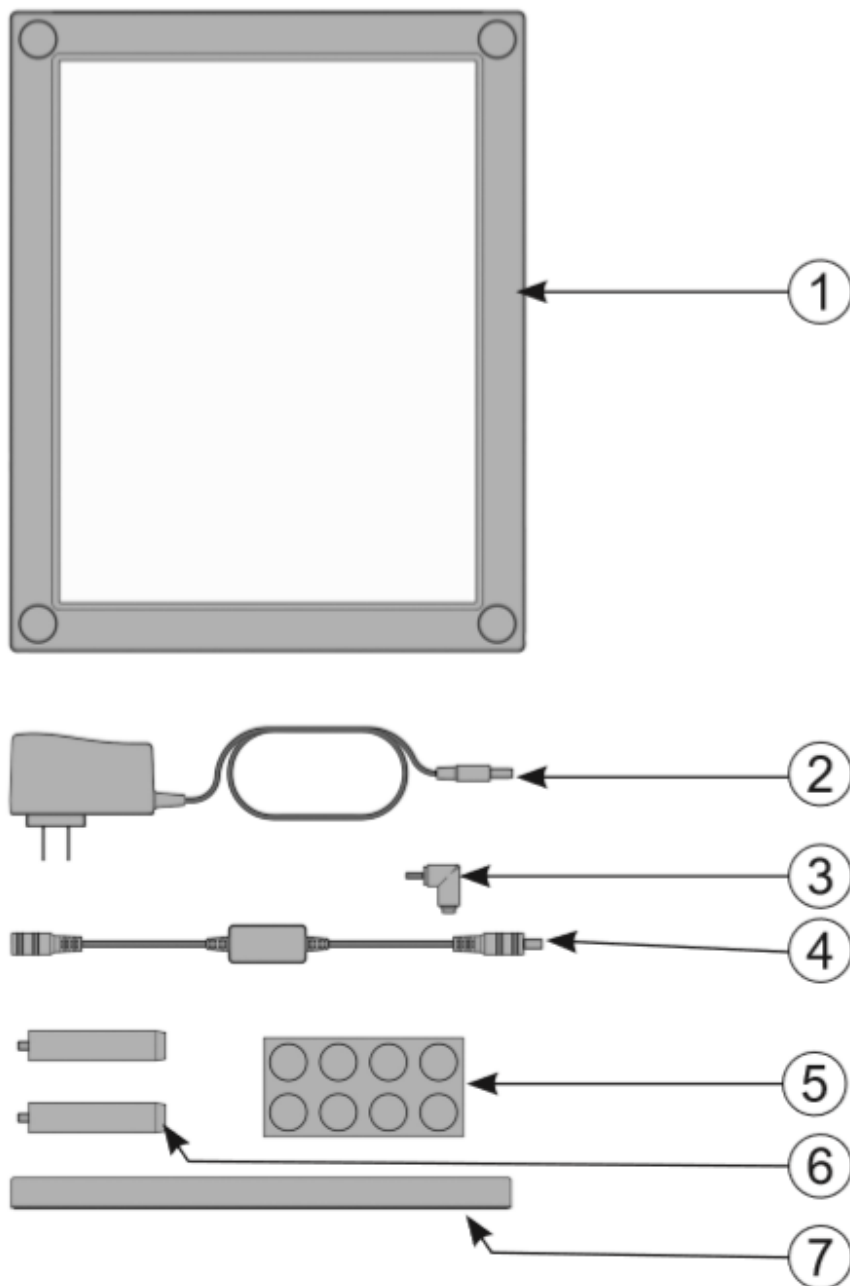

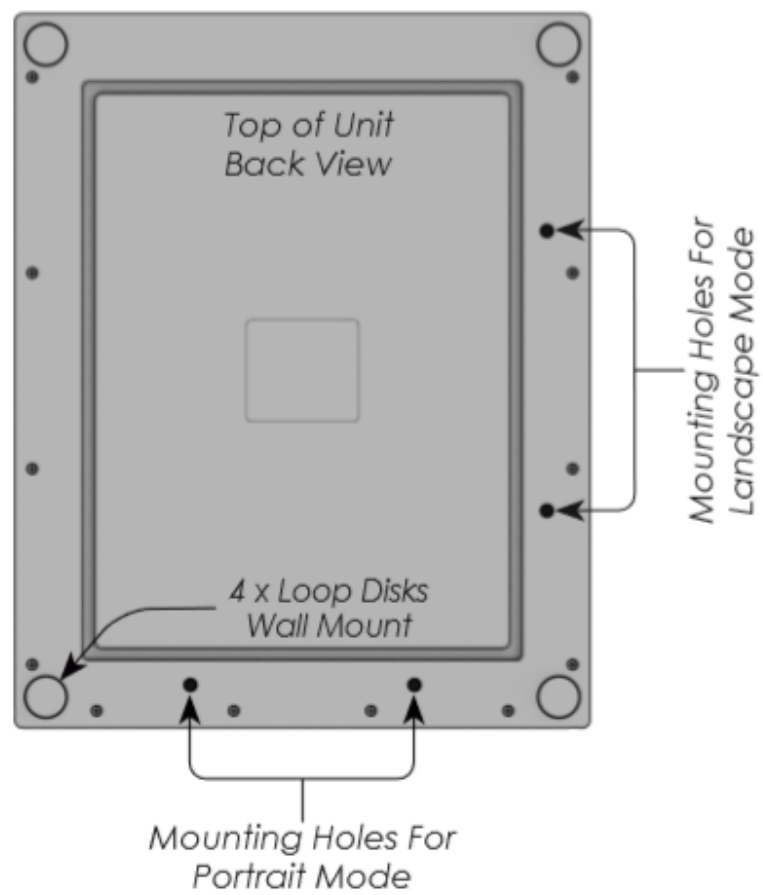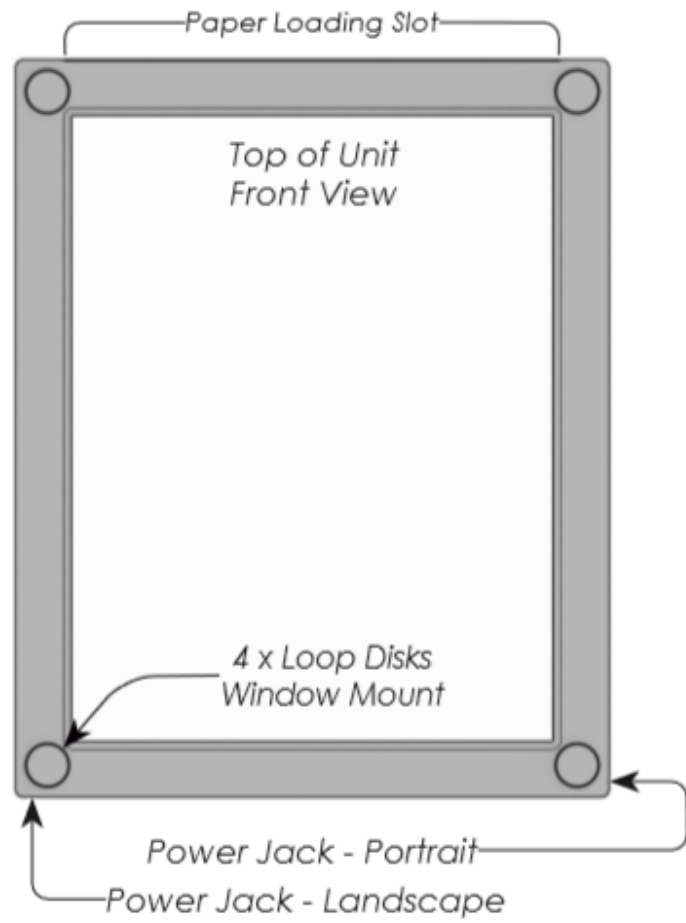

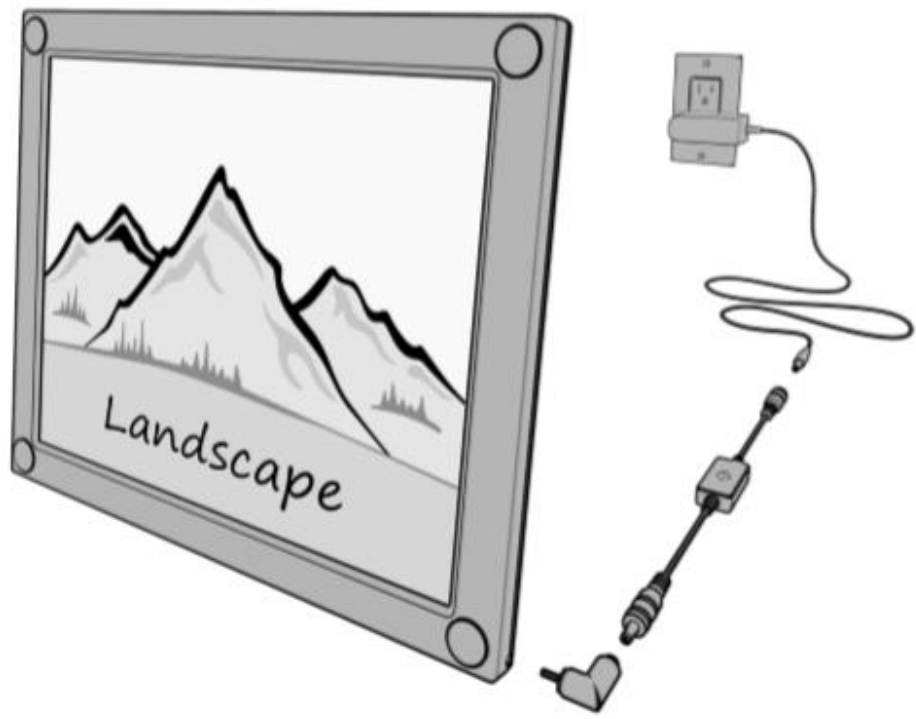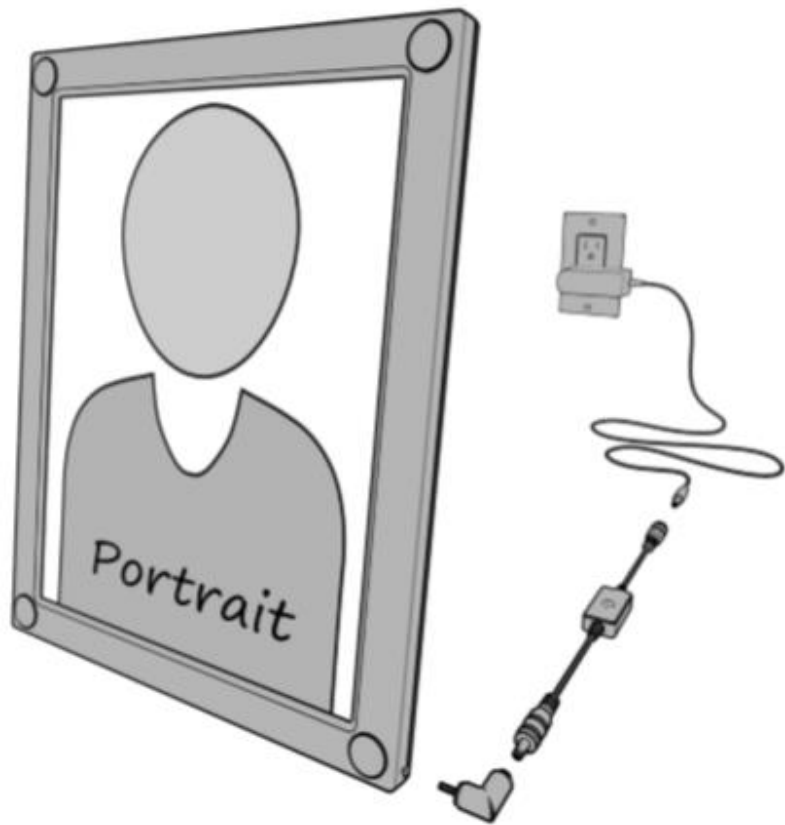

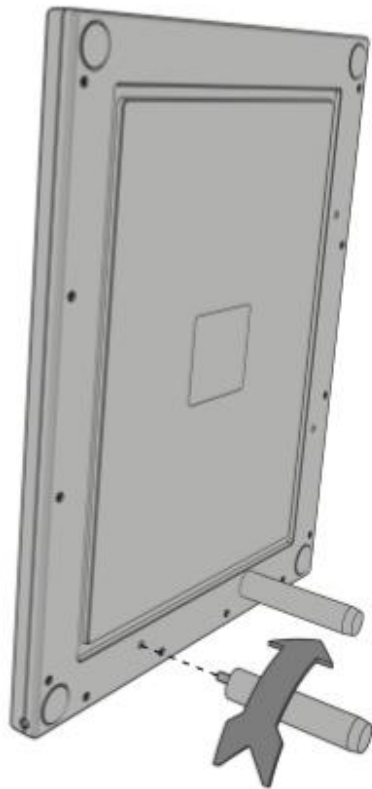



*Screw Cylinder Stand  
Into Mounting Hole.*

*Clockwise to Assemble.  
Finger Tighten Only.*

*Insert Printed Media Into Paper  
Slot at Top of the unit.*

*With forefingers placed at the  
bottom center of the sheet,  
gently pull printed media down  
until fully seated within the  
PrintSign frame.*

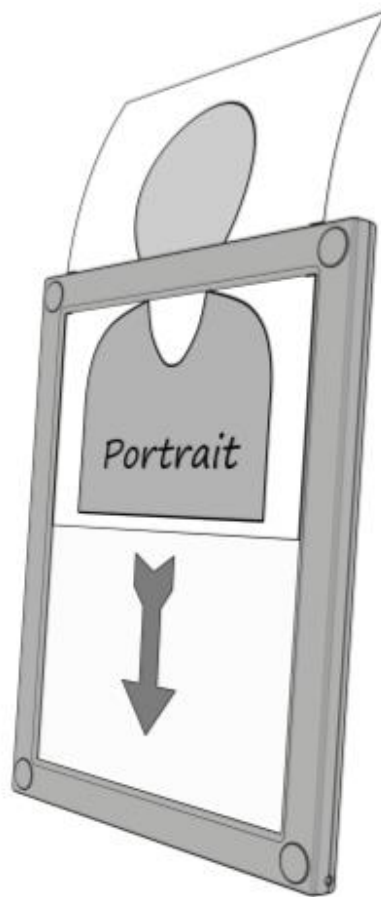

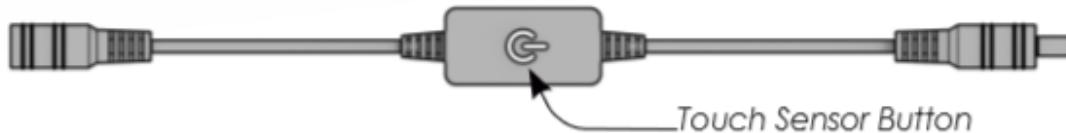

**On/Off Dimmer Switch Operation:**

- Tap the touch sensor button once to turn PrintSign display on and off.
- Press and hold sensor button to increase or decrease brightness.

**Wall/Window Mounting:** Mount the PrintSigns display to wall or window using a combination of prt-064-01-033 - Support Bracket and the 4 x Hook disks. The weight of the display rests on the Support Bracket and the 4 x Hook disk hold the unit flat against the wall or window surface. See Figure - 1.

**Note:** Adhesives should be applied at a room temperature of 20°C - 68°F or higher.

**Step - 1:** Clean wall or window surface to ensure that it is free of all dirt, grease and dust particles. For best results, use a clean cloth and isopropyl alcohol (rubbing alcohol) to free surface of any contaminants and allow the cleaned area to dry completely before applying adhesives.


**Note:** Be careful not to touch the exposed adhesives with your fingers when applying adhesives to mounting surface.

**Step - 2:** Remove the protective backing strip from the adhesive on the Support Bracket. Locating the desired position, press along the full length of the Support Bracket firmly onto mounting surface. Take particular care to ensure that the Support Bracket is mounted squarely for presentation. Masking tape may be used as a location and level guide prior to the final application of Support Bracket adhesive.


**Step - 3:** The PrintSign comes assembled with 4 x loop disks permanently mounted on both the front and back of the PrintSign display unit. These disks provide for the secure mounting of the PrintSign display flat to the mounting surface. Assemble hook disk - PRT-064-01-002 - to loop disk on the PrintSign unit by centrally locating on one of the loop disks. Then peel back the clear substrate. See Figure - 2.

**Step - 4:** Once you have the 4 x hoop disks assembled, align the bottom edge of the PrintSign display centrally, and on top of the Mounting Bracket and then gently press all four corners of the PrintSign display unit firmly onto the wall or window mounting surface.

Please visit our website at [www.PrintSigns.com/videos](http://www.PrintSigns.com/videos) for easy tips and tricks to mount the PrintSign display.

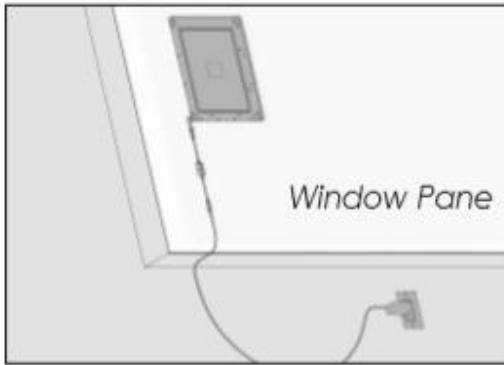

Window Mount Option

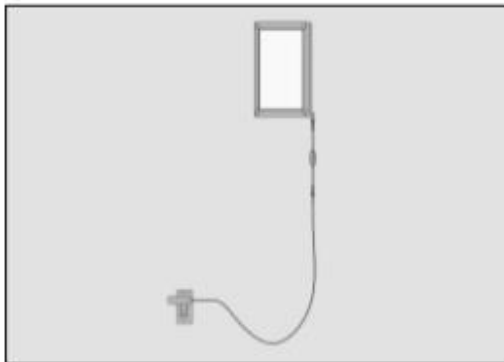

Wall Mount Option

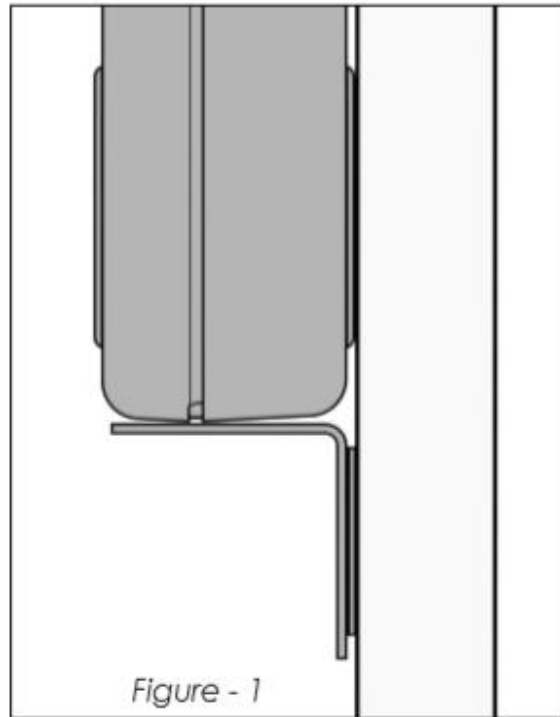


Figure - 1

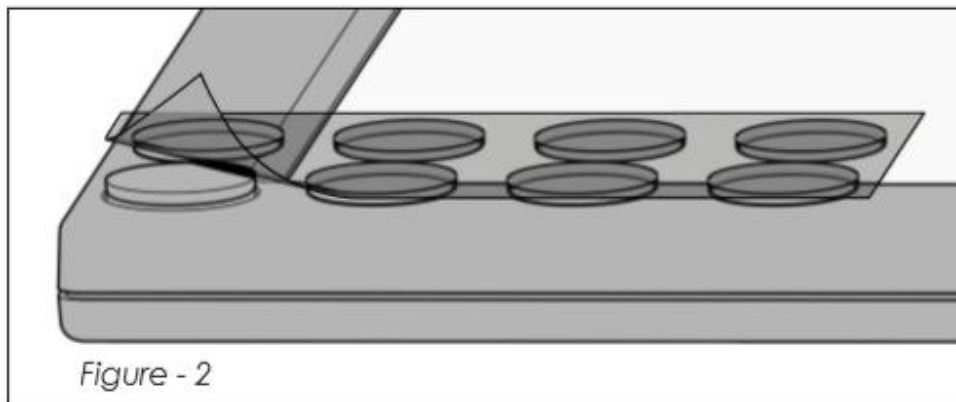


Figure - 2

**Window Mount - Changing Media:** When the PrintSign is mounted with the Window Mount Option, the unit must be removed in order to replace the printed media. To do this, place strips of masking tape along one short and one long side of the PrintSign unit before detaching from the hook disks on the window. Once the printed media has been replaced, use the masking tape as location reference to realign the hook disks on the window with the loop disks on the PrintSign unit.

**Warranty:** PrintSigns International Inc. will warranty this device against material defects and workmanship, under ordinary consumer usage, for a period of one year from the purchase date of original retail purchase. During this warranty period, if a defect arises in function of the device, and you follow the instructions for returning the device, we will at our option, a) repair the device using new or refurbished parts or components, b) replace the device with new or refurbished that is of equal value to the device that is to be replaced or c) refund to you all or part of the purchase price of the device.

This limited warranty applies only to hardware and electrical components of the device that have not been subject to accident, misuse, neglect, fire or other external causes, alterations or repair, and have not been subjected to the introduction of sand, water, rain, other humidity and liquids. This warranty does not apply to damage that occurs during shipping and handling. This warranty shall be null and void if damage occurs from peripheral devices that are not supplied by PrintSigns International Inc.

For specific instruction about how to obtain warranty service for your Device, please contact Customer Service at [WWW.PrintSigns.com](http://WWW.PrintSigns.com). In general, you will be required to deliver your device in its original packaging, or in equally protective packaging, to the address specified by Customer Service.

**Warning:** Use only the 12V - 1000mA Power Adaptor that came packaged with your PrintSigns display. The use of any other power will void and nullify the warranty.

**Warning:** The PrintSigns display was designed for indoor use only. Do not expose the PrintSigns display to storm, snow, rain or moisture. The exposure and introduction of moisture to this device will void and nullify the warranty.

**Warning:** The PrintSigns display was not designed for use in a moving motor vehicle. The 4 x adhesive disks are not sufficient to secure the PrintSigns display unit in the event of rapid deceleration. Failure to heed this warning could result in the possibility of serious personal injury.

**About Printing Media:** Not all printing media are created equal. Many off-the-shelf brands of printing media are not made with transparency and clarity in mind and therefore reveal watermarks, smudges, discoloration and imperfections that appear only when light is transmitted through the media. For best results, use PrintSign's Clear View Semi-Gloss printing media available at: [www.PrintSigns.com](http://www.PrintSigns.com)

For great on-line editing and design tools, please visit our website at:

- [www.PrintSigns.com](http://www.PrintSigns.com)

or go directly to the following resources:

- [www.PosterMyWall.com](http://www.PosterMyWall.com) (with over 100,000 free design templates)
- [www.Menugo.com](http://www.Menugo.com) (specializes in menus)